

CONDUCTOR

Network-connectable automatic control system for controlling the air temperature and air quality in a room



QUICK FACTS

- Automatic control of the air volume, cooling and heating
- The set points for temperature and airflow can be set via the room thermostat.
- Occupancy control via key card/sensor
- Simple configuration of settings keyed in the room thermostat
- Wireless communication between room thermostat and controller
- Inputs for condensation sensor, window contact and other normally-closed contacts
- Up to twelve pairs of actuators can be wired to each controller.
- Possible connection up to main control system via Mod-Bus RTU
- Optional cooling sequence - air/water or water/air.
- Air quality control via CO₂ sensor.

The CONDUCTOR Room control equipment for controlling both the room temperature and the air volume, is especially designed for controlling the waterborne climate in offices, hotel rooms, hospitals and conference rooms.

CONDUCTOR W1	Office with constant airflow
CONDUCTOR W3	Hotel with occupancy-controlled airflow
CONDUCTOR W4.1	Hotel/office with occupancy-controlled airflow.
CONDUCTOR W4.2	Conference room with air quality-controlled airflow and temperature control



Contents

Technical Description	3
Flexibility.....	3
User Friendliness	3
Reliability and Minimal Maintenance	3
Operation	3
CONDUCTOR W1	4
Office with constant airflow.....	4
CONDUCTOR W1 in a nutshell.....	4
Operating mode	4
CONDUCTOR W3	5
Hotels or hospitals with occupancy-controlled airflow in fixed steps.	5
Timed Airing.....	5
Manual control	5
Automatic Control	5
Flow boost in the event of rapid changes in temperature.....	5
Operating Mode.....	5
Data Communication.....	5
CONDUCTOR W3 in a Nutshell	6
Operating Mode.....	6
CONDUCTOR W4	7
Situation-adapted, demand control of air, cooling energy and heating for maximum energy saving.	7
Adapting to the Situation.....	7
Energy Saving Control.....	7
Optional Sequences	7
Manual Control.....	8
Adaptable commissioning	8
Data Communication.....	8
Water first/then air	8
Air first/then water	8
CONDUCTOR W4 in a Nutshell	9
Operating mode	9
Technical Data	11
CONDUCTOR RE Controller.....	11
CONDUCTOR RU room thermostat	12
Ordering Key	13
Ordering key, Control equipment.....	13
Ordering Key, Accessories	13
Specification Text	13

Technical Description

Our new CONDUCTOR in-house developed room control equipment is a natural result of our efforts to provide the user with a healthy indoor climate. Different rooms have different requirements, and this has motivated us to develop various applications. These applications are principally developed for the climate control of waterborne climate systems in offices, hotels, hospitals and conference rooms.

This is more clearly described under the different applications: W1 (office with constant airflow), W3 (Hotel with occupancy-controlled airflow), W4.1 (Hotel/office with occupancy-controlled airflow) and W4.2 (conference room with air quality-controlled airflow and temperature control).

Another important building services engineering advantage is that internal communication between room unit (RU) and controller unit (RE) normally is wireless. This makes visible cabling between air conditioning unit (normally one or several comfort modules, chilled beams or periphery climate units) unnecessary. All cable connections are hidden above the false ceiling and all wiring is done with detachable standard connections, i.e. screw wiring terminals.

The room thermostat has a pure design and is equipped with a digital display that clearly shows the room setpoint and other usual indicating symbols.

All settings can be keyed directly in the room thermostat; however it is also possible to read the current room temperature for example. The user can change the room temperature setpoint simply by pressing buttons and the result is immediately visible in the display.

The CONDUCTOR always offers an underlying advantage in that you can connect it up to ModBus RTU. It will also be possible to operate it connected up to other Swegon ModBus units. For further particulars, get in touch with your nearest Swegon representative.

Flexibility

- The user can easily configure the controller functions and parameters by means of the room thermostat.
- Wireless communication offers flexibility when deciding where to place the room thermostat.
- You can connect up to twelve pairs of actuators (twelve for cooling + twelve for heating) to each controller, or up to four complete units per controller for controlling both the airflow (supply air and central return air, 5 damper actuators) and cooling and heating (cooling and heating circuit, valve actuators)

User Friendliness

- Simple and clear room thermostat design with digital display that also shows cooling or heating load readings
- The actuator's "first open" function simplifies pressure testing and venting the water system
- The actuators indicate the position of the valve by means of a clearly visible cylinder body (up – open position, down – closed position).

Reliability and Minimal Maintenance

- Input for condensation sensor that immediately cuts off the cooling water in the event of condensate precipitation
- Regular exercising of the valves prevents the valve spindles from becoming jammed
- The controller is designed for minimizing the risk of faulty wiring; it features quick contacts with screw wiring terminals
- Low heat generation in incorporated components

Operation

Regulation

The controller provides proportional and integral (PI) control. The I section senses both the size and the duration of the control deviation and adjusts the actuator opening time accordingly. This type of control is called pulse-width modulation (PWM). Compared with on/off control, for instance, PWM control offers more uniform room temperature which enhances room comfort. It is possible to adjust from PWM control to 0-10V control.

Valve actuators and valves

The actuator is of NC type (Normally-closed) but is equipped with a so-called "first open" function which means that the actuator is open when it is installed. This facilitates pressure testing and venting the water system.

The "First open" function of the actuator is automatically disabled after approx. 6 minutes while energized. A clicking noise will be heard after which the actuator will change over to the NC mode and the normal regulation function will begin.

The valves are exercised every second 24-hour period. On these occasions, all the actuators wired to the controller are opened fully for 3 minutes, which prevents the valve spindles from jamming.

Data Communication

The controller has a built-in communication port that enables connection to an RS 485 network with ModBus for supervising and override control via a main system, such as a computer.

CONDUCTOR W1

Office with constant airflow

The CONDUCTOR W1 room control equipment is designed for controlling the indoor climate in offices. Since the room environment should be invigorating, and offer the highest degree of comfort possible, uniform temperature and a healthy indoor climate are significant necessities, regardless of the outdoor temperature and season. Individual variations in room level are also significant necessities.

CONDUCTOR W1 in a nutshell

- The CONDUCTOR consists of: Digital controller, room unit, hand-held terminal, thermo-electrical actuators, valves, cables and accessories
- Control function: PI
- Power supply: 24 V AC, Low Voltage class 2
- Inputs: Condensation sensor
External temperature sensor
- Outputs: Valve actuator (max 72 VA)
Signal to external relay
- Communication: Room unit (wireless or via RJ12 cable)
ModBus RTU (RJ12)

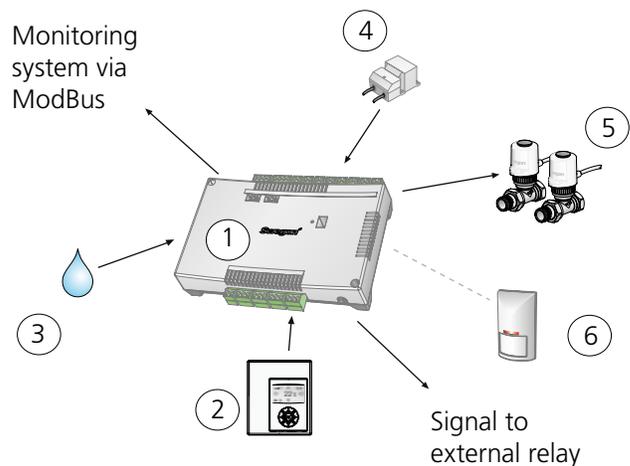


Figure 1. CONDUCTOR W1: Integral Components

- 1 Controller Conductor RE W1
- 2 Room unit Conductor RU
- 3 Condensation sensor
- 4 Transformer Low Voltage class 2
- 5 Valve actuator LUNA a AT-2
- 6 Occupancy sensor DETECT Occupancy

Information about wiring can be found in a separate manual at www.swegon.com.

Table 1. CONDUCTOR W1 Operating Mode

Mode	Condensation	Cooling	Heating
A	Yes	Off	Normal
B	No	Normal	Normal

Operating mode

The various operating conditions of the controller are shown in Table 1. The operation modes are based on the status of the condensation sensor. Each given operating mode controls cooling and heating until the user manually sets the temperature.

The normal case is described in Case B: No condensation. Control is then completely normal and controls heating or cooling in order to maintain the right temperature in the room.

The cooling circuit valve closes if condensation is likely to form.

CONDUCTOR W3

Hotels or hospitals with occupancy-controlled airflow in fixed steps.

The CONDUCTOR W3 is an application specially designed for controlling the indoor climate in hotel rooms and hospitals. Since the room environment should be peaceful, quiet and offer the highest degree of comfort possible, uniform temperature and a healthy indoor climate are significant necessities, regardless of the outdoor temperature and season. Individual variations in room level are also significant necessities. During certain times of the year, high humidity may also involve risk of condensation.

CONDUCTOR W3 has what it takes to be the optimal control and regulation equipment for hotel rooms as well as for hospitals. CONDUCTOR W3 makes control of the supply airflow, extract airflow and temperature possible, in order to provide the best possible comfort in the room.

Takes prevailing circumstances into account

- The controller input for the occupancy sensor (or a key card reader) makes it possible to adjust the airflow and temperature on the basis of occupancy in the room.
- In response to signals indicating an open window, the controller regulates the valves and damper to reduce the water flow and air flow respectively to a minimum, in order to save energy.

Timed Airing

When occupancy is detected occupancy sensor (or key card reader) the controller sets the air dampers to the high airflow setting to air out the room. After 5 min. the controller returns to the auto mode and an operating condition according to the status of the sensors, see Table 2. The user can easily change or deactivate the airing period from the room thermostat, or from a building supervising system.

Manual control

Whenever the CONDUCTOR W3 registers occupancy in the room (in response to signals from a presence detector or a key card reader) the user can regulate the airflow and temperature by entering settings in the room thermostat.

When the controller is set to the auto mode, the airflow is determined on the basis of the status of the sensors. See Table 2. The user can also manually control the airflow in three steps. The controller controls the supply air and extract air damper motors by means of three voltage levels that open the pivotal dampers to different settings. If the system is set for a high rate of airflow, the controller increases the flow of fresh supply air, not just the flow of recirculated air as in many other room climate systems.

The output signals from the controller to the supply air and extract air dampers respectively are individually adjustable. To achieve balance in the room when the duct pressures in the supply air and extract air ducts are not the same, the user can easily adjust the flows via the room thermostat.

Automatic Control

When the user leaves the room or withdraws the key card from the card reader, the controller automatically decreases the supply air and the extract air to a low rate of airflow and the system returns to the auto mode. The valve actuators for the cooling and heating water circuits respectively are controlled in this position in response to the status of the other sensors in the room, but with a greater permissible differential (wider dead band), so-called energy saving mode. See Table 2 for possible operating conditions.

Flow boost in the event of rapid changes in temperature

When the difference between the present value of the temperature and the setpoint exceeds 3.6 F, the controller sets the air dampers to the high airflow setting to increase heating or cooling capacity. When the difference has dropped to a level below the preset default value, the air dampers return to the normal flow setting.

The temperature difference can be set to another value via the room thermostat. The user can completely disable the flow boost function, if required.

Operating Mode

The various operating conditions of the controller are shown in Table 2. The various operating conditions are based on occupant presence in the room and the status of the window contact and condensation sensor. According to each operating condition, the controller controls the airflow, cooling and heating until the user manually sets the airflow or temperature. The airing function or flow boosting function in progress (see below) are exceptions from the operating conditions specified in Table 2.

Data Communication

The control unit has a built-in communication port that enables connection to an RS 485 network with ModBus for supervising and override control via a building supervision system.

CONDUCTOR W3 in a Nutshell

The CONDUCTOR consists of:	Digital controller, Room unit, thermo-electrical actuators, valves, cables and accessories
Control function:	PI
Power supply:	24 V AC, Low Voltage class 2
Inputs:	Condensation sensor Occupancy sensor Window contact External temperature sensor
Outputs:	Valve actuator (max 72 VA) Damper actuator (max. 25 VA) Signal to external relay
Communication:	Room unit (wireless or via RJ12 cable) ModBus RTU (RJ12)

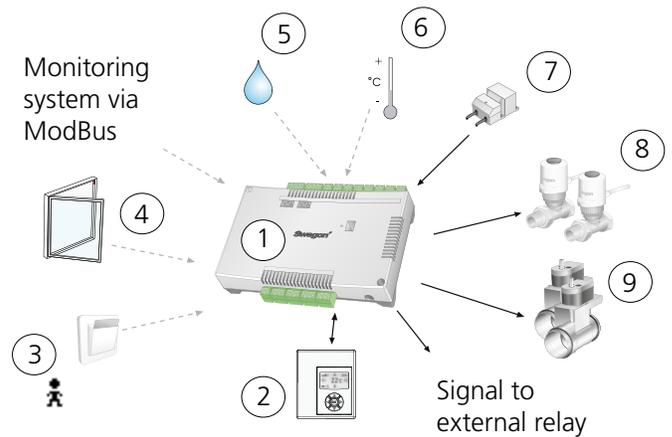


Figure 2. CONDUCTOR W3: Integral Components

Operating Mode

The various operating conditions of the controller are shown in Table 2. The operating modes are based from status of occupancy, window contact and condensation sensor. According to each operating condition, the controller controls the airflow, cooling and heating until the user manually sets the temperature and/or the airflow.

The normal case is described in Case C: Occupancy, no condensation or open window. Control is then completely normal and controls the airflow, heating or cooling in order to maintain the right temperature in the room.

The airflow is controlled to decrease when there is no occupant in the room and the temperature control function switches to the economy mode. In the economy mode, the dead band is increased to $\pm 3.6F$ (it is normally $\pm 0.9F$).

If the controller receives a signal indicating that condensation has formed, the cooling valve closes and if the window contact indicates an open window, the heating control function switches over to the frost protection mode. In the frost protection mode, the setpoint is set to a lower value (normally 50°F).

- | | |
|---|----------------------------------|
| 1 Controller | Conductor RE W3 |
| 2 Room unit | Conductor RU |
| 3 Key card/
Occupancy sensor | SYST SENSOI/
DETECT Occupancy |
| 4 Window contact | |
| 5 Condensation sensor | |
| 6 External temp. sensor | CONDUCTOR T-TG |
| 7 Transformer | Low Voltage class 2 |
| 8 Valve actuator | ACTUATOR b 24V NC |
| 9 Ventilation damper incl.
damper actuator | CRTc-aaa-2
(aaa = dimension) |

Information about wiring can be found in a separate manual at www.swegon.com.

Table 2. CONDUCTOR W3 Operating Mode

Mode	Condensation	Occupancy	Window	Airflow	Cooling	Heating
A	No	No	Closed	Low	Economy	Economy
B	Yes	No	Closed	Low	Off	Economy
C	No	Yes	Closed	Normal	Normal	Normal
D	No	No	Open	Low	Off	Frost protection
E	Yes	Yes	Closed	High	Off	Normal
F	Yes	No	Open	Low	Off	Frost protection
G	No	Yes	Open	Low	Off	Frost protection
H	Yes	Yes	Open	Low	Off	Frost protection

CONDUCTOR W4

Situation-adapted, demand control of air, cooling energy and heating for maximum energy saving.

CONDUCTOR W4 is an optimized application for controlling waterborne cooling and heating in combination with supply air.

The **W4.2** is able to control two supply air dampers and one extract air damper and is mainly intended for use in conference rooms.

Since the number of occupants in conference rooms is relatively low while the number of people present at the meetings varies from meeting to meeting, a situation-adaptable indoor climate system is required for creating a healthy room climate and at the same time minimizing the use of energy.

The **W4.1** is able to control one supply air damper and one extract air damper and is mainly designed for use in hotels and offices.

Since needs differ from case to case, CONDUCTOR W4 offers optional cooling step sequences. The user has the option of first using air to cool the room and then adding waterborne cooling if the need arises. The user can also opt to let chilled water cool the air first and then increase the airflow if the need arises.

Adapting to the Situation

- The presence detector continuously checks whether someone is in the room and adjusts the airflow between the preset min. flow and the occupancy flow.
- The CO₂ sensor continuously measures the air quality in the room. When the room is occupied, the controller variably adjusts the airflow between the preset occupancy flow and the max. permissible flow in order to supply a sufficiently high airflow for the current number of occupants.
- The pressure sensor measures the static air pressure on the supply and extract air sides. The pressure reading is used both for balancing the supply and extract air and for controlling the damper blade positions.
- The condensation sensor located on the chilled water supply pipe senses any actual condensation precipitation. If any condensation has formed on surfaces, all the cooling valve actuators wired to the controller are closed in order to stop the precipitation of condensate. As this occurs, the controller increases the flow of supply air in order to compensate the loss of capacity until condensation precipitation has ceased and waterborne cooling can be resumed.

- Window contacts can be wired to the system for sensing whether a window is open or closed. If a window should prove to be open, the controller adapts the system so that cooling, heating and ventilation is switched off in order to avoid unnecessary energy losses. If someone leaves a window open during a cold winter night, for instance, the system has a built-in frost protection function that causes the heating to start up if the room temperature drops below 50°F.

Energy Saving Control

CONDUCTOR W4 can be optimized for the relevant room by configuring desired airflows while the system is operating in the min. airflow, occupancy flow and max. airflow mode. These settings are based on the climate and energy usage of the room.

- The min. flow is set to the desired airflow when there is no occupant present in the room. The setting range is between 0 cfm and at most the value required as the normal airflow rate when the premises are occupied. As standard, this value is set to 20% of the occupancy airflow.
- Set the occupancy airflow to the initial position desirable when an occupant is detected. This flow should be set to suffice for relatively few persons. As an example, airflow sufficient for 2 persons can be selected in a room for 10 persons.
- Set the max. permissible airflow to the design airflow required when the room is full.

The control principle for Application W4 is that if no one is present, only a small volume of supply air is discharged so that the air will feel fresh when someone first enters the room. When the system detects occupancy, the airflow is increased to the preset occupancy airflow rate. The CO₂ sensor continuously measures the air quality. If the CO₂ level remains below the preset max. permissible value (800 ppm as standard) the airflow will be kept constant at the occupancy flow setting. If the occupancy flow is not sufficient for keeping the CO₂ level below the max. permissible value, the airflow will be variably increased and will adjust to the flow that is sufficient for ensuring the required air quality. Since a conference room most often is not occupied to capacity, there is seldom any need for the system to reach the max. permissible airflow. This control principle makes it possible to save energy both when the premises are occupied and when they are unoccupied.

Optional Sequences

Since needs differ from case to case, CONDUCTOR W4 has been developed with optional cooling step sequences.

CONDUCTOR

Water first/then air

When the room is occupied, the room temperature is first regulated mainly by means of waterborne cooling. If waterborne cooling is not enough, the air volume is variably increased until the room air reaches the required room temperature. The air volume is regulated at the same time according to the CO₂ level. If the CO₂ level should exceed the preset max. permissible value, the controller will increase the airflow regardless of whether this is needed for regulating the room temperature for the purpose of ensuring proper air quality. If the required room temperature is achieved, the waterborne cooling circuit is closed until a new need for cooling arises.

Air first/then water

When the room is occupied, the room temperature is first regulated mainly by increasing the airflow. The airflow is variably increased until the room air reaches the required room temperature. If the max. permissible airflow is reached and the room temperature still does not reach the required level, the waterborne cooling system is started up in order to increase the cooling capacity. When the required room temperature is reached, the waterborne cooling system is switched off and the temperature is again solely controlled by the supply air. The air volume is regulated at the same time according to the CO₂ level. If the CO₂ level should exceed the preset max. permissible value, the controller will increase the airflow regardless of whether this is needed for regulating the room temperature for the purpose of ensuring proper air quality.

Manual Control

Although the CONDUCTOR W4 is an intelligent and to a great extent automatic room control equipment, it is possible to manually control the room climate. This can be done by means of the room thermostat which wirelessly (or via a wired connection) communicates with the controller. The clear display in combination with a clear and user friendly key pad enables the user to easily change the room temperature and airflow.

Adaptable commissioning

CONDUCTOR W4 does not require commissioning other than the setting of a few parameters entered from the hand-held micro terminal. The adaptive commissioning feature is made possible by the pressure sensor which is part of the system. By measuring the static pressure at appropriate reference points the controller is continuously updated with readings of the current pressure in the comfort modules and the duct pressure downstream of the extract air register. Only the transmission of current pressure drop constants via the room thermostat to the controller is required in order to find out which airflow is being distributed to the room. The controller computes which pressure represents the right airflow and accordingly adjusts the damper blade angle settings until the correct pressure and thus the airflow to the room is achieved.

Simplified commissioning is an obvious advantage, but there are also other benefits. One important benefit is that possible pressure variations in the duct system will not affect the preset airflows since the damper blade angle settings are independent and are only controlled in response to the values transmitted by the pressure sensors.

Data Communication

The control unit has a built-in communication port that enables connection to an RS 485 network with Modbus RTU for supervision and override control via a building supervision system.

CONDUCTOR W4 in a Nutshell

The CONDUCTOR consists of:	Digital controller W4.1 or W4.2, Room unit, thermo-electrical actuators, valves, motor-driven dampers, sensors, cables and accessories
Control function:	PI
Power supply:	24 V AC, Low Voltage class 2
Inputs:	Condensation sensor, presence detector Window contact, CO ₂ sensor. Pressure sensor, External temperature sensors
Outputs:	Valve actuator, cooling (max. 72 VA) Valve actuator, heating (max. 72 VA) Damper actuator (max. 25 VA) Signal to external relay (W4.1)

Operating mode

The various operating modes of the controller are shown in Table 3. The operating modes are based on the status on the presence sensor, window contact, condensation sensor and CO₂ sensor. According to each operating mode, the controller controls the airflow, cooling and heating functions until the user manually sets the temperature and/or the airflow. The controller decreases the airflow when there is no occupant in the room and switches the temperature control function to the economy mode. The neutral zone or the dead band in the normal mode, economy mode and holiday mode can be set by entering cut-in temperatures for cooling and heating. The setpoint is set to a lower value (normally 50° F) if the anti-frost protection function is enabled. When a room is not in use for a longer period of time, it is possible via a main control system to continue RE in the Holiday mode.

This is an energy saving operating mode in which the desired airflow and cut-in temperatures for cooling and heating can be selected for just this period.

Table 3. CONDUCTOR W4 operating mode

Mode	Kondens	Occupancy	Window	Carbon dioxide	Airflow	Cooling	Heating
A	No	Yes	Closed	Under	Normal	Normal	Normal
B	No	No	Closed	Under	Low	Economy	Economy
C	No	Yes	Open	Under	Closed	Closed	Frost protection
D	No	No	Open	Under	Closed	Closed	Frost protection
E	Yes	Yes	Closed	Under	High	Closed	Normal
F	Yes	No	Closed	Under	Low	Closed	Economy
G	Yes	Yes	Open	Under	Closed	Closed	Frost protection
H	Yes	No	Open	Under	Closed	Closed	Frost protection
I	No	Yes	Closed	Over	High	Normal	Normal
J	No	No	Closed	Over	Low	Economy	Economy
K	No	Yes	Open	Over	Closed	Closed	Frost protection
L	No	No	Open	Over	Closed	Closed	Frost protection
M	Yes	Yes	Closed	Over	High	Closed	Normal
N	Yes	No	Closed	Over	High	Closed	Economy
O	Yes	Yes	Open	Over	Closed	Closed	Frost protection
P	Yes	No	Open	Over	Closed	Closed	Frost protection

CONDUCTOR

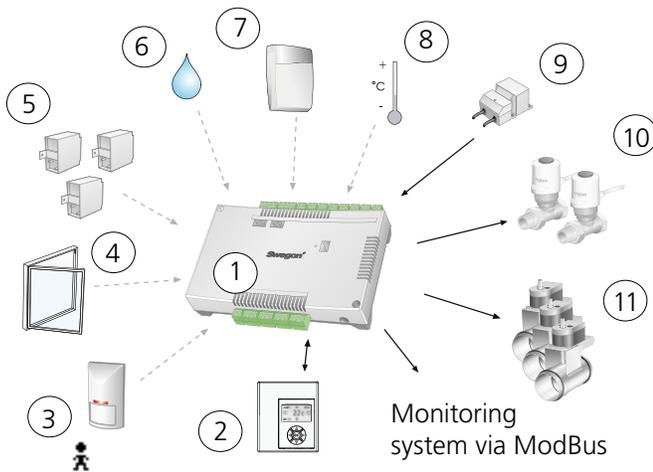


Figure 3. Conductor W4.2: Integral Components

1	Controller	Conductor RE W4.2
2	Room unit	Conductor RU
3	Occupancy sensor	DETECT Occupancy
4	Window contact	
5	Pressure sensor	SYST PS
6	Condensation sensor	
7	CO ₂ sensor	DETECT Quality
8	External temp. sensor	CONDUCTOR T-TG
9	Transformer	Low Voltage class 2
10	Valve actuator	ACTUATOR b 24V NC
11	Ventilation damper incl. damper actuator	CRTc-aaa-2 (aaa = dimension)

The CONDUCTOR W4.2 makes it possible to connect an extra supply air damper.

Information about wiring can be found in a separate manual at www.swegon.com.

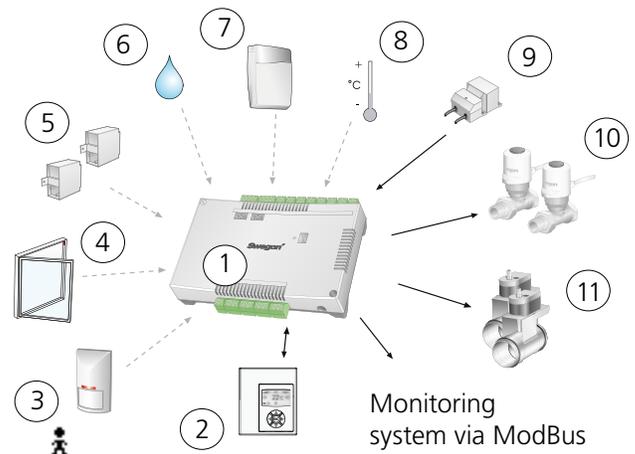


Figure 4. Conductor W4.1: Integral Components

1	Controller	Conductor RE W4.1
2	Room unit	Conductor RU
3	Occupancy sensor/ Key card	DETECT Occupancy/ SYST SENSO
4	Window contact	
5	Pressure sensor	SYST PS
6	Condensation sensor	
7	CO ₂ sensor	DETECT Quality
8	External temp. sensor	CONDUCTOR T-TG
9	Transformer	Low Voltage class 2
10	Valve actuator	ACTUATOR b 24V NC
11	Ventilation damper incl. damper actuator	CRTc-aaa-2 (aaa = dimension)

Information about wiring can be found in a separate manual at www.swegon.com.

Technical Data

CONDUCTOR RE Controller

Designation:	CONDUCTOR RE (W1, W3, W4.1 or W4.2)
Storage temperature:	-40 to 176 °F
Operating temperature:	-4 to 122 °F
Degree of protection:	IP 20
Dimensions:	4.76" x 7.60" x 1.73"
Power supply:	24 V AC ±10 %, class 2
Power consumption:	1 VA
Control function:	PI
P-band, cooling/heating increments:	1.8 F
Dead band, room occupancy:	Depends on switching in cooling and switching in heating
Dead band, no occupancy:	Depends on switching in cooling and switching in heating
Anti-frost protection:	50 °F
Valve exercising:	Once/48 h period (fully open for 6 min.)
Mounting:	Mounting hole in enclosure or against DIN rail
Connections:	Wiring terminal for 13 GA multi-wire cable
Data Communication:	Modbus RTU
Wireless Communication:	915 MHz band radio modem with room thermostat
Inputs:	
Condensation sensor:	Resistance
Temperature sensor:	Resistance
Presence detector/Key card :	No occupancy/NO/NC (optional), default = NC for occupancy
Window contact: (W3 and W4 only)	No occupancy/NO/NC (optional), default = NC for closed window
The CO ₂ sensor: (W4 only)	NP / Enabled
Modular contact:	RJ12-6pole for connecting up to the room thermostat RJ12-6pole for connecting up to the ModBus pressure sensor (max. 3 sensors)

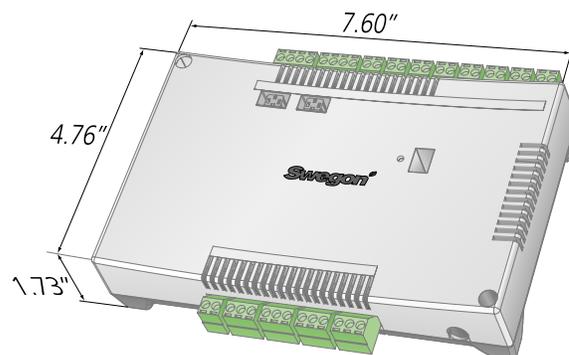


Figure 5. CONDUCTOR RE controller

Outputs:

Actuator, heating: (W1, W3 and W4.1)	24 V AC, PWM (on/off or 0-10V) max load: 72 VA = 12 actuators
Actuator, heating: (W4.2 only)	24 V AC (on/off) Max load 72 VA = 12 actuators
Actuator, cooling:	24 V AC, PWM (on/off or 0-10V) max load: 72 VA = 12 actuators
Supply air damper 1: (W3, W4.1 and W4.2 only)	0–10 V DC max load 25 VA = 5 actuators.
Supply air damper 2: (W4.2 only)	0–10 V DC max load 25 VA = 5 actuators.
Extract air damper: (W3, W4.1 and W4.2 only)	0–10 V DC max load 25 VA = 5 actuators.
Relay output: W1 / W3	Signal for occupancy
Relay output: W4.2	Output signal, heating
Relay output: W4.1	Not used

CONDUCTOR RU room thermostat

Designation: CONDUCTOR RU
 Temperature, storage: -40 to +176 °F
 Operating temperature: 32 to 122 °F
 Degree of protection: IP 20
 Dimensions: 3.39" x 3.94" x 1.26"
 Power supply: 12 V DC, 4 size AAA batteries, alt. Voltage from a modular cable via controller

Actual value, range: 50 to 90 °F (on delivery set to 72°F)

Mounting: Against a wall, not exposed to direct sunlight

In-operation LED, temp.: Cooling load: 
 Heating load: 

In-operation LED, air: Low flow:  1 LED lit (W3 and W4 only)
 Normal flow:  2 LEDs lit (W3 and W4 only)
 High flow:  3 LED lit (W3 and W4 only)

Inputs:

RJ12-6pole modular contact for connecting up to the controller

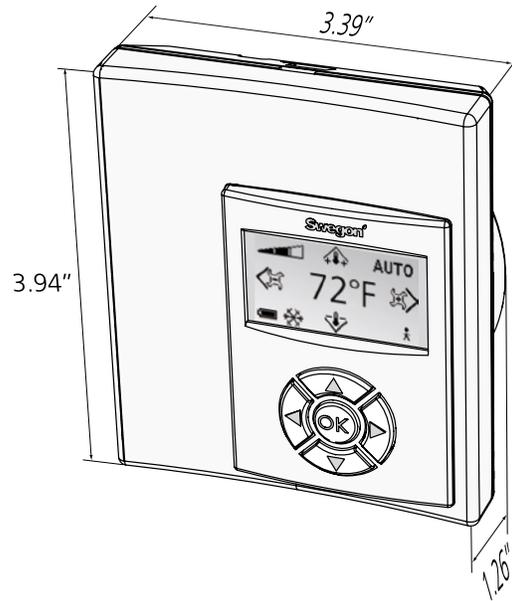


Figure 6. CONDUCTOR RU room unit

Ordering Key

Ordering key, Control equipment

Controller	CONDUCTOR RE	aaaa
W1, W3, W4.1 or W4.2		

Room unit	CONDUCTOR RU
------------------	--------------

Ordering Key, Accessories

Valve actuator	ACTUATOR b 24V NC
-----------------------	-------------------

Valve	SYST VD 115-CLC
--------------	-----------------

Ventilation damper incl. damper actuator (W3 and W4 only)	CRTc	aaa-	2
Dimension 100, 125 and 160			

Occupancy sensor	DETECT Occupancy
-------------------------	------------------

CO₂ sensor	DETECT Quality
------------------------------	----------------

Pressure sensor	SYST PS
------------------------	---------

External temperature sensors	CONDUCTOR T-TG
-------------------------------------	----------------

Adapter, actuator/valve	ACTUATOR b adapter-	aaaaaaaa
To valve type: T&A = Tour & Andersson OVENTROP = Oventrop MMA = Certain MMA valves RAV/L = Danfoss RAV/L RAV = Danfoss RAV RA = Danfoss RA		

Specification Text

Example of a specification text conforming to VVS AMA Standard.

Swegon's control equipment for waterborne climate units, type CONDUCTOR W1, W3 or W4, with the following functions:

- Designed for room control via ModBus
- Wireless room thermostat with digital display
- Programmable controller
- Individual temperature control
- Indication of the present airflow (W3 and W4 only) and heating/cooling load
- PWM Control function (24 V AC) or 0–10 V DC
- Controls heating and cooling in sequence
- Controls supply and extract airflow (W3 and W4 only)
- Automatic conditioning of valves
- Electro-thermal actuator, two-position (on/off) with clear position indicator
- "First open" function for simple filling, pressure testing and venting the water system
- Inputs for condensation sensor, external window contact and external temperature sensor.
- Inputs for presence detector or key card reader.
- Inputs for CO₂ sensor and pressure sensor (W4 only)
- Occupancy control by external relay (W1 and W3 only)

Delivery

- The valves are delivered to the plumbing contractor for installation in the system.
- The room controller is delivered to the electrical contractor, systems contractor or other contractor for installation to the unit junction box.
- All electrical installation, including wiring the actuators, motorised dampers and various sensors is to be carried out by the electrical contractor or the systems contractor.
- The electrical contractor or the systems contractor provides a 120/208/277V outlet for the transformer and a fitted mounting box for the temperature sensor and possible external cables.

Accessories

- ACTUATOR b 24V NC Valve actuator, xx pcs
- SYST VD 115-CLC Valve, xx pcs
- Ventilation damper incl. damper actuator, CRTc aaa-2, xx pcs
- Transformer, Low Voltage class 2, xx pcs
- ACTUATOR b adapter, Adapter, actuator/valve, xx pcs
- CONDUCTOR T-TG external temperature sensor
- DETECT Occupancy occupancy sensor, xx pcs
- DETECT Quality CO₂ sensor, xx pcs
- SYST PS Pressure sensor, xx pcs

Specify the quantity separately or with reference to the drawing.