



Section B-B

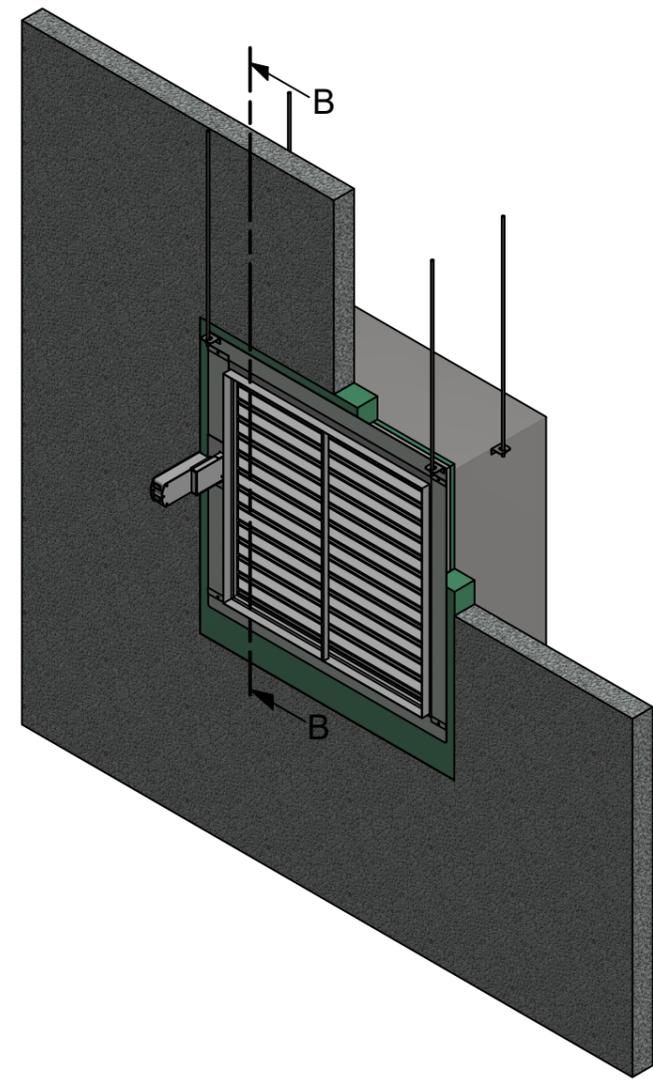

Soft seal Ablative BATT infill sizes (viewed on non-access side)

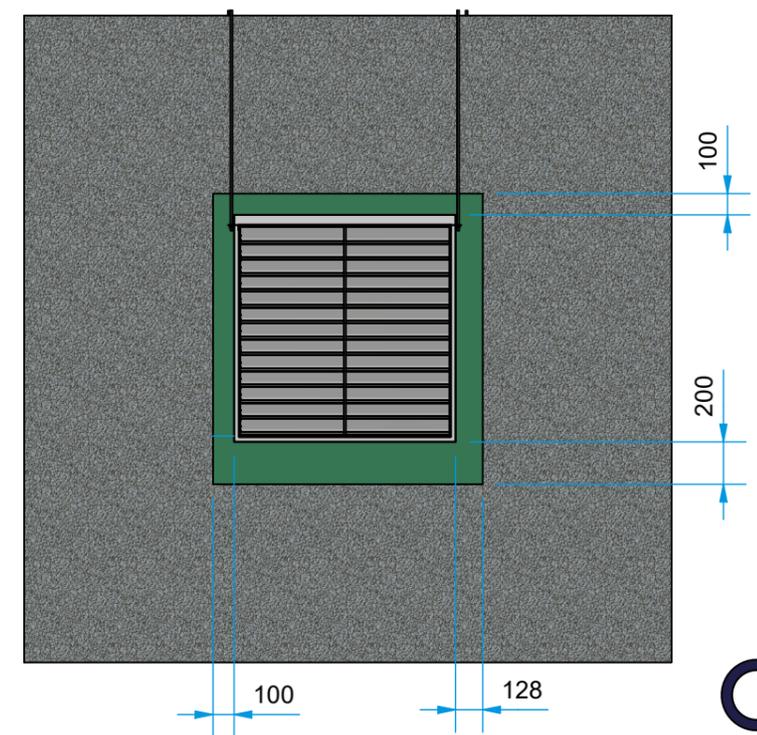

actionair
by Swegon

© Swegon Air Management Limited
South Street, Whitstable, Kent CT5 3DU
Tel: +44 (0)1227 276100
Email: actionair@swegon.com
www.swegon.com/uk

Installation Detail

If your proposed installation details differ from that shown here, please discuss this with the authority having jurisdiction, referencing this documentation.

Deviation from this drawing requires approval of the relevant authority.

Connecting ductwork omitted for clarity. Ductwork must be independently supported. There must be an appropriate break-away joint between the damper and the connecting ductwork on both sides of the installation.

A minimum of 200mm between fire dampers installed in separate ducts and 75mm between fire damper and construction elements/edges needs to be observed unless otherwise specified in the drawing.



SCAN ME

Please refer to the DoP for latest classifications for CE/UKCA compliance and the Installation, Operation and Maintenance Guide

A	ECN2320	MJB	20-03-24
Rev:	Comments:	By:	Date:
Drawn By:	M. Bushell	Date:	12/07/2023
Checked By:	S. Gore	Date:	20/03/2024
Approved By:	M. Kimberley	Date:	20/03/2024

Description:
VERTICAL APPLICATION
SMOKE SHIELD + DWFX-F S&A
WITH ROCKWOOL SOFT SEAL IN
A MASONRY WALL
Damper Size Range (mm)
200 x 200 to 1000 x 1000

Reference No:	Sheet	Rev
AAF13529	1 of 1	A